


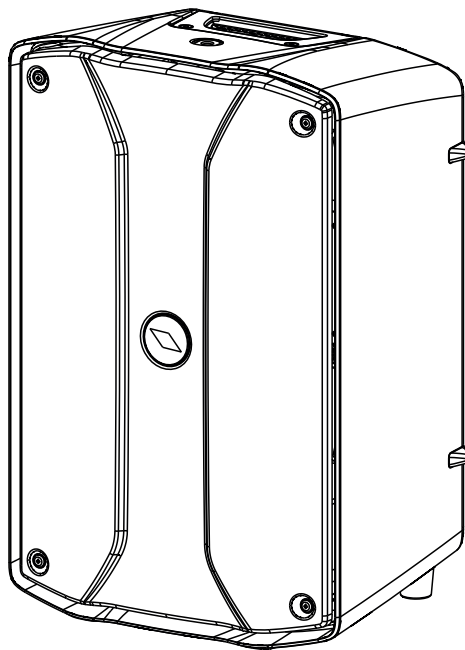

# FLASH8XD

active processed loudspeaker

USER MANUAL  
MANUALE D'USO



## FCC COMPLIANCE NOTICE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The information contained in this publication has been carefully prepared and checked. However no responsibility will be taken for any errors. All rights are reserved and this document cannot be copied, photocopied or reproduced in part or completely without written consent being obtained in advance from PROEL. PROEL reserves the right to make any aesthetic, functional or design modification to any of its products without any prior notice. PROEL assumes no responsibility for the use or application of the products or circuits described herein.



Il marchio riportato sul prodotto o sulla documentazione indica che il prodotto non deve essere smaltito con altri rifiuti domestici al termine del ciclo di vita. Per evitare eventuali danni all'ambiente si invita l'utente a separare questo prodotto da altri tipi di rifiuti e di riciclarlo in maniera responsabile per favorire il riutilizzo sostenibile delle risorse materiali. Gli utenti domestici sono invitati a contattare il rivenditore presso il quale è stato acquistato il prodotto o l'ufficio locale preposto per tutte le informazioni relative alla raccolta differenziata e al riciclaggio per questo tipo di prodotto. Gli utenti aziendali sono invitati a contattare il proprio fornitore e verificare i termini e le condizioni del contratto di acquisto. Questo prodotto non deve essere smaltito unitamente ad altri rifiuti commerciali.



Il simbolo del lampo con freccia in un triangolo equilatero intende avvertire l'utilizzatore per la presenza di "tensioni pericolose" non isolate all'interno dell'involucro del prodotto, che possono avere una intensità sufficiente a costituire rischio di scossa elettrica alle persone.



Il punto esclamativo in un triangolo equilatero intende avvertire l'utilizzatore per la presenza di importanti istruzioni per l'utilizzo e la manutenzione nella documentazione che accompagna il prodotto.

Le informazioni contenute in questo documento sono state attentamente redatte e controllate. Tuttavia non è assunta alcuna responsabilità per eventuali inesattezze. Tutti i diritti sono riservati e questo documento non può essere copiato, fotocopiato, riprodotto per intero o in parte senza previo consenso scritto della PROEL. PROEL si riserva il diritto di apportare senza preavviso cambiamenti e modifiche estetiche, funzionali o di design a ciascun proprio prodotto. PROEL non assume alcuna responsabilità sull'uso o sull'applicazione dei prodotti o dei circuiti qui descritti.



## INDEX

TECHNICAL SPECIFICATIONS .....	3
DIMENSIONS AND FLYING POINTS.....	4
ACCESSORIES .....	5
CONTROL PANEL (FIG.1).....	6
CONNECTIONS (FIG.2) .....	6
CONFIGURATIONS (FIG.3) .....	7
SAFETY AND PRECAUTIONS .....	8
IN CASE OF FAULT .....	8
TROUBLESHOOTING .....	8
CE CONFORMITY .....	9
PACKAGING, SHIPPING AND COMPLAINT .....	9
WARRANTY AND PRODUCTS RETURN .....	9
INSTALLATION AND DISCLAIMER .....	9
POWER SUPPLY AND MAINTENANCE .....	9
INTRODUCTION .....	10
INSTRUCTIONS (FIG. 1 / 2 / 3) .....	10

## INDICE

SPECIFICHE TECNICHE .....	3
DIMENSIONI E PUNTI DI SOSPENSIONE.....	4
ACCESSORI .....	5
PANNELLO DI CONTROLLO (FIG.1).....	6
CONNESSIONI (FIG.2) .....	6
CONFIGURAZIONI (FIG.3) .....	7
AVVERTENZE PER LA SICUREZZA .....	12
IN CASO DI GUASTO .....	12
PROBLEMATICHE COMUNI.....	12
CONFORMITÀ CE.....	13
IMBALLAGGIO, TRASPORTO E RECLAMI .....	13
GARANZIE E RESI .....	13
INSTALLAZIONE E LIMITAZIONI D'USO.....	13
ALIMENTAZIONE E MANUTENZIONE .....	13
INTRODUZIONE.....	14
ISTRUZIONI (FIG. 1 / 2 / 3).....	14

## TECHNICAL SPECIFICATIONS





MODEL	FLASH8XD
<i>System type</i>	2-way vented enclosure
<i>High Frequency Device</i>	1" compression driver with 1" voice coil
<i>Low Frequency Device</i>	8" woofer with 1.5"VC
<i>Angular Coverage</i>	90° H x 60° V
<i>Frequency Response</i>	65 Hz - 20 kHz
<i>Crossover Frequency</i>	2500 Hz
<i>Max SPL at 1mt (peak)</i>	122 dBspl
<i>Total peak power</i>	600 W
<i>HF Amplifier Cont. Power</i>	50 W Class D
<i>LF Amplifier Cont. Power</i>	250 W Class D
<i>Processing</i>	CORE LT digital processor
<i>Input Impedance</i>	30 kohm balanced 15 kohm unbalanced
<i>Input Sensitivity</i>	LINE: +4 dBu / MIC: -34 dBu
<i>Controls</i>	MIC LEVEL, LINE LEVEL, DSP MODE, FRONT LED
<i>Connectors</i>	MIC: XLR-F LINE: Combo XLR-F / JACK LINK: XLR-M
<i>Power Supply</i>	110-240 V~ - 50/60 Hz
<i>Rated Consumption</i>	200 W
<i>Construction</i>	Hi Density Polypropylene with Metal Grid
<i>Flying System</i>	3 x M8 Top/Bottom
<i>Mounting Pole</i>	1 x bottom
<i>Handles</i>	1 x top aluminium
<i>Monitor taper</i>	42°
<i>Weight</i>	9 Kg (19.8 lb)
<i>Dimensions (W x H x D)</i>	270 x 422 x 250 mm

## SPECIFICHE TECNICHE

MODELLO	FLASH8XD
<i>Sistema</i>	2 vie bass-reflex
<i>Altoparlante alti</i>	driver a compressione 1" con bobina da 1"
<i>Altoparlante bassi</i>	woofer 8" con bobina da 1.5"
<i>Copertura angolare</i>	90° H x 60° V
<i>Risposta in Frequenza</i>	65 Hz - 20 kHz
<i>Frequenza Crossover</i>	2500 Hz
<i>SPL max a 1m (picco)</i>	122 dBspl
<i>Potenza massima di picco</i>	600 W
<i>Potenza Continua Amp. AF</i>	50 W Classe D
<i>Potenza Continua Amp. BF</i>	250 W Classe D
<i>Processamento</i>	CORE LT digital processor
<i>Impedenza ingresso</i>	30 kohm bilanciato 15 kohm sbilanciato
<i>Sensibilità ingresso</i>	LINE: +4 dBu / MIC: -34 dBu
<i>Controlli</i>	MIC LEVEL, LINE LEVEL, DSP MODE, FRONT LED
<i>Connettori</i>	MIC: XLR-F LINE: Combo XLR-F / JACK LINK: XLR-M
<i>Tensione alim. di rete</i>	120-240 V~ - 50/60 Hz
<i>Consumo nominale</i>	200 W
<i>Costruzione</i>	Polipropilene Alta Densità con Griglia in Metallo
<i>Sistema di sospensione</i>	3 x M8 Sopra/Sotto
<i>Flangia per supporti</i>	1 x sotto
<i>Maniglie</i>	1 x sopra in alluminio
<i>Inclinazione monitor</i>	42°
<i>Peso</i>	9 Kg
<i>Dimensioni (LxAxP)</i>	270 x 422 x 250 mm

**DIMENSIONS AND FLYING POINTS**

**DIMENSIONI E PUNTI DI SOSPENSIONE**

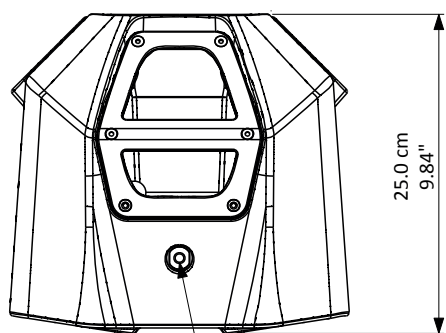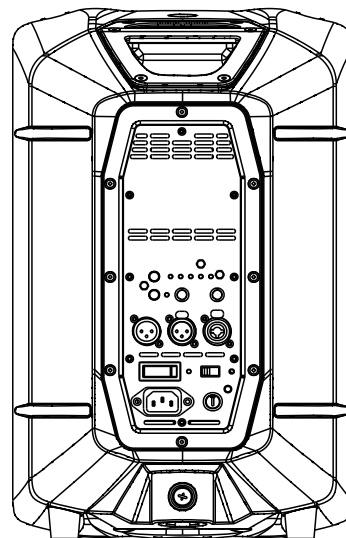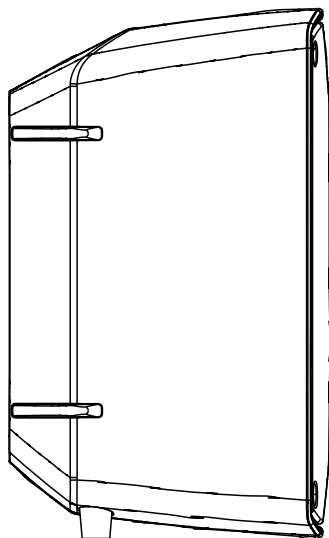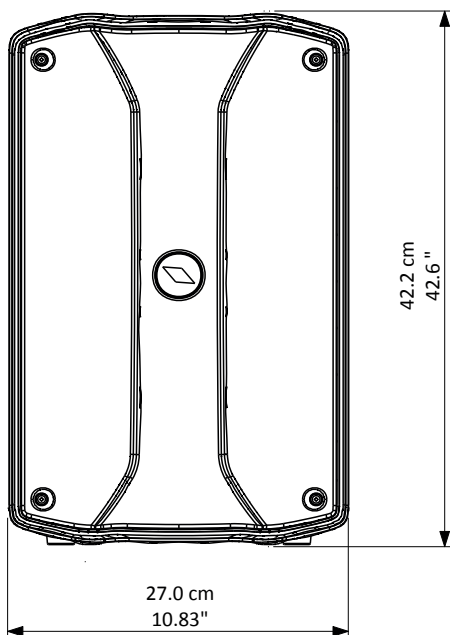


M8 Flying Point

M8 Flying Point

M8 Flying Point

Pole Adapter

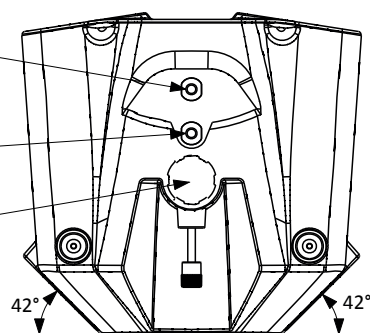



## ACCESSORIES

### KP210

Adjustable speaker pole for speaker-subwoofer separation with terminal pieces  $\varnothing$  35 mm. Supplied with a bolt locking mechanism incorporating a steel pin for extra safety. Adjustment: 825 - 1320 mm.

### FRE300BK

Professional aluminium floor-stand for speaker with terminal pieces  $\varnothing$  35mm. Supplied with a screw locking system, a steel safety pin and "Aircushioned" air-damped release device to grant a flexible, fast and easy adjustment. Adjustment: 1470-2180 mm.

### KPTFL8X

C-shape metal bracket for wall mount with +/- 52° free rotation.

### PLH300

Single aluminium coupler for 50mm truss with M12 bolt, always use two couplers with the KPTFL8X for each speaker.

### COVERFL8X

Protection cover.

## ACCESSORI

### KP210

Supporto distanziatore cassa-subwoofer regolabile in acciaio con terminali  $\varnothing$  35mm. Dotato di meccanismo di chiusura a vite con pin di sicurezza in acciaio. Regolazione: 825 - 1320 mm.

### FRE300BK

Supporto professionale in alluminio da pavimento con terminali  $\varnothing$  35mm. Con sistema di blocco a vite, pin di sicurezza in acciaio e dispositivo di smorzamento ad aria per la massima velocità e facilità di regolazione. Regolazione: 1470-2180 mm.

### KPTFL8X

Supporto in metallo a C per montaggio a muro con rotazione di +/- 52°.

### PLH300

Accoppiatore per truss 50mm in alluminio con bullone M12, usarne sempre due insieme all'accessorio KPTFL8X.


### COVERFL8X

Copertura di protezione.




CONTROL PANEL (FIG.1)

PANNELLO DI CONTROLLO (FIG.1)

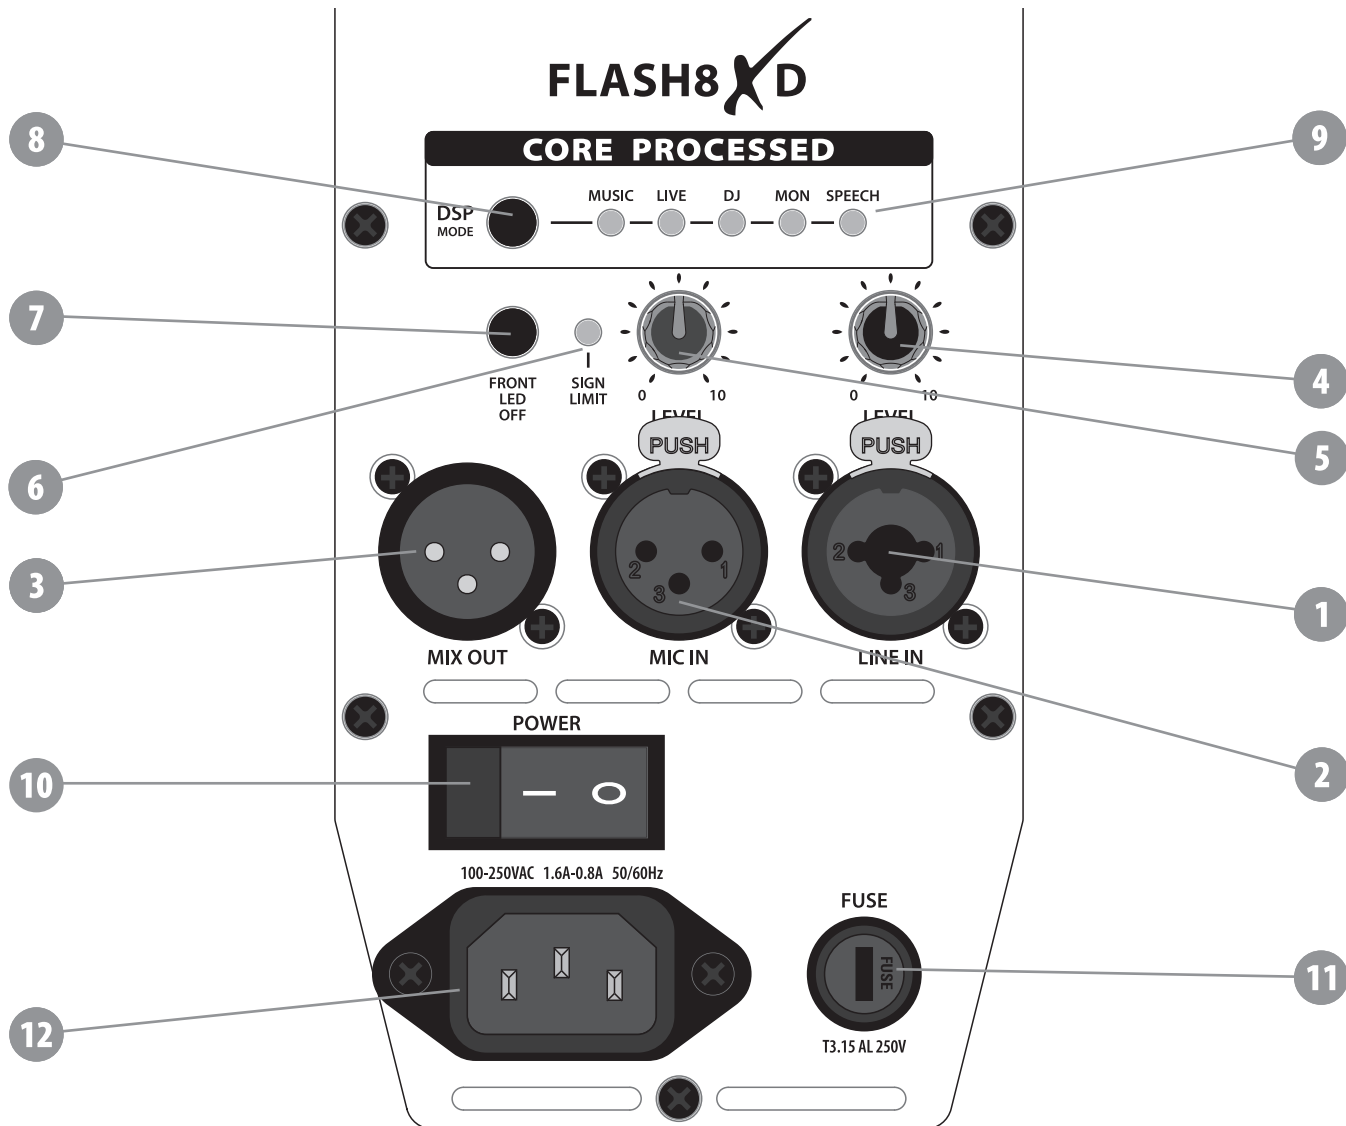


CONNECTIONS (FIG.2)

CONNESSIONI (FIG.2)

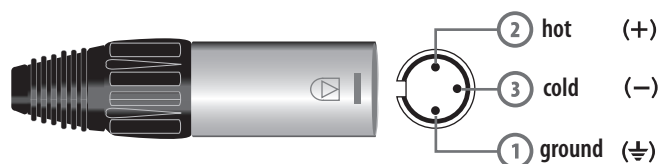


LINE / MIC IN  
Balanced male XLR

LINE / MIC IN (ingresso)  
XLR bilanciato maschio

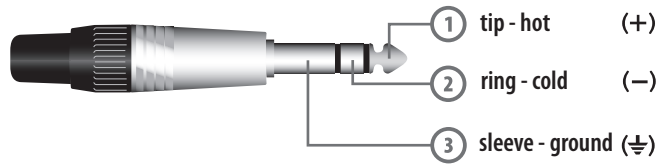


LINE IN  
Jack (balanced)

LINE IN (ingresso)  
Jack (bilanciato)

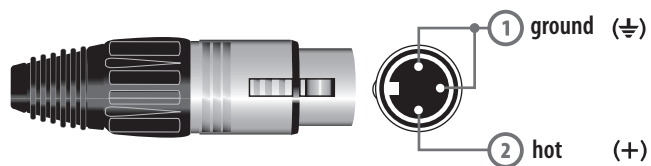

MIX OUT (output)  
Unbalanced female XLR

MIX OUT (uscita)  
XLR sbilanciato femmina

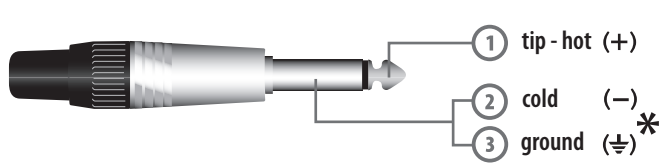

LINE IN  
Jack (unbalanced)

LINE IN (ingresso)  
Jack (sbilanciato)

\*note: connect both cold and ground to make cable from balanced to unbalanced

\*nota: connettere insieme cold e ground per cavi da bilanciato a sbilanciato



### CONFIGURATIONS (FIG.3)


### CONFIGURAZIONI (FIG.3)

dynamic microphone  
 PROEL suggested types:  
**DM580 - DM580LC**  
**DM226 - DM220 - DM800**

or  
 WM wireless mic




**FLASH8XD** (mic in) single voice system  
**FLASH8XD** (line in) single voice system  
**FLASH8XD** (line in) single voice system

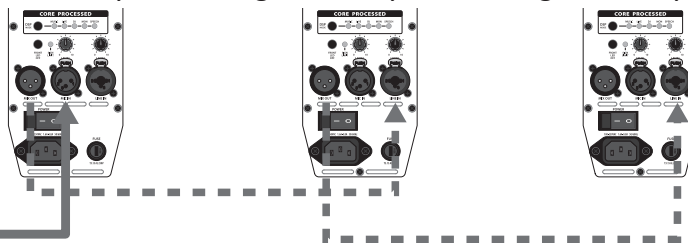

minimal  
 conference  
 system

LEFT  
**FLASH8XD**

RIGHT  
**FLASH8XD**


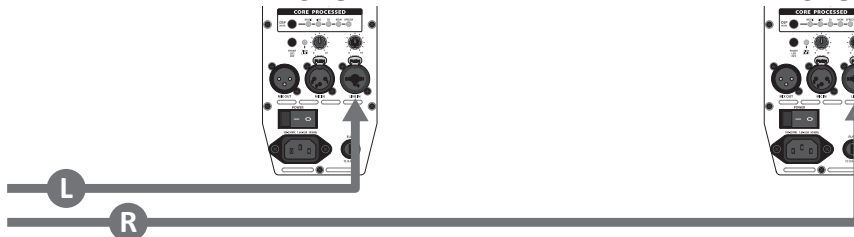


basic system  
 2x FLASH8XD

LEFT  
**FLASH8XD (sat)**

RIGHT  
**FLASH8XD (sat)**


PROEL suggested  
 equipment:  
 M-series mixer

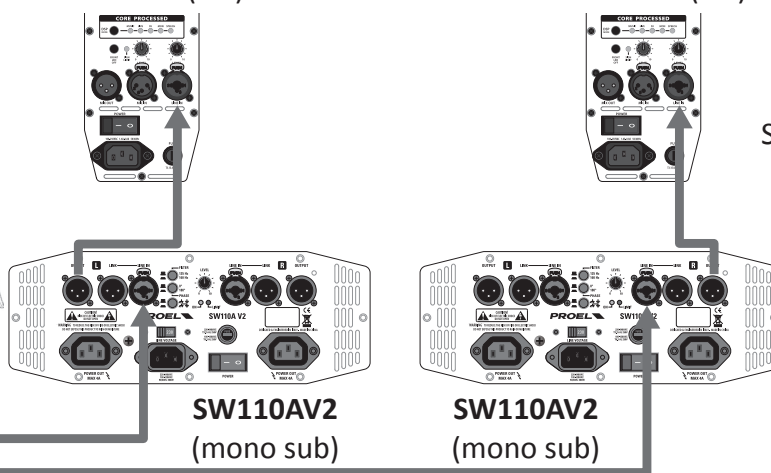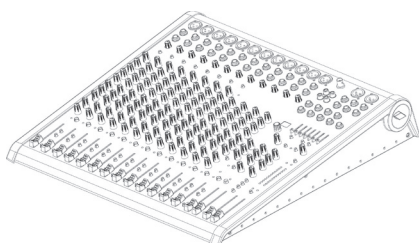

SUB+SAT system1  
 2x SW110AV2  
 +  
 2x FLASH8XD

LEFT  
**FLASH8XD (sat)**

RIGHT  
**FLASH8XD (sat)**

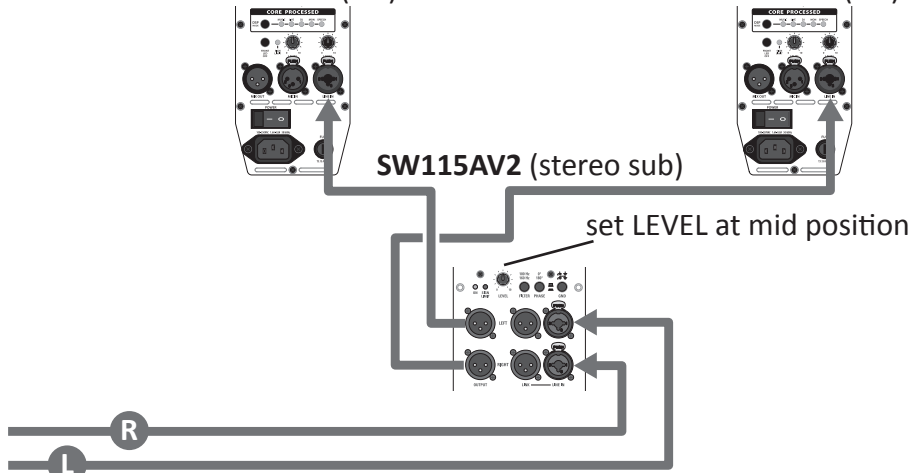

SUB+SAT system2  
 1x SW115AV2  
 +  
 2x FLASH8XD





## SAFETY AND PRECAUTIONS

- **⚠ CAUTION:** before using this product read carefully the following safety instructions. Take a look of this manual entirely and preserve it for future reference.

When using any electric product, basic precautions should always be taken, including the following:

- To reduce the risk, close supervision is necessary when the product is used near children.
- Protect the apparatus from atmospheric agents and keep it away from water, rain and high humidity places.
- This product should be site away from heat sources such as radiators, lamps and any other device that generate heat.
- This product should be located so that its location or position does not interfere with its proper ventilation and heating dissipation.
- Care should be taken so that objects and liquids do not go inside the product.
- The product should be connected to a power supply mains line only of the type described on the operating instructions or as marked on the product. Connect the apparatus to a power supply using only power cord included making always sure it is in good conditions.
- **⚠ WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- Do not cancel the safety feature assured by means of a polarized line plug (one blade wider than the other) or with a earth connection.
- Make sure that power supply mains line has a proper earth connection.
- Power supply cord should be unplugged from the outlet during strong thunderstorm or when left unused for a long period of time.
- Do not place objects on the product's power cord or place it in a position where anyone could trip over, walk on or roll anything over it. Do not allow the product to rest on or to be installed over power cords of any type. Improper installations of this type create the possibility of fire hazard and/or personal injury.

– This product may be capable of producing sound levels that could cause permanent hearing loss. Exposure to extremely high noise levels may cause permanent hearing loss. Individuals vary considerably in susceptibility to noise-induced hearing loss, but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a period of time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the permissible noise level exposures shown in the following chart. According to OSHA, any exposure in excess of these permissible limits could result in some hearing loss. To ensure against potentially dangerous exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of producing high sound pressure levels use hearing protectors while the equipment is in operation. Ear plugs or protectors in the ear canals or over the ears must be worn when operating the equipment in order to prevent permanent hearing loss if exposure is in excess of the limits set forth here. Keep your attention that children and pets are more susceptible to excessive noise levels.

Duration Per Day In Hours	Sound Level dBA Slow Response	Typical Example
8	90	Duo in small club
6	92	
4	95	Subway Train
3	97	
2	100	Very loud classical music
1.5	102	
1	105	Traffic noise
0.5	110	
0.25 or less	115	Loudest parts at a rock concert

## IN CASE OF FAULT

- In case of fault or maintenance this product should be inspected only by qualified service personnel when:
  - There is a flaw either in the connections or in the supplied connecting cables.
  - Liquids have spilled inside the product.
  - The product has fallen and been damaged.
  - The product does not appear to operate normally or exhibits a marked change in performance.
  - The product has been lost liquids or gases or the enclosure is damaged.
- Do not operate on the product, it has no user-serviceable parts inside, refer servicing to an authorized maintenance centre.

## TROUBLESHOOTING

<b>No Power</b>	<ul style="list-style-type: none"> <li>• The loudspeaker's "POWER" switch is off.</li> <li>• Make sure the mains AC outlet is live (check with a tester or a lamp).</li> <li>• Make sure the mains plug is securely plugged into mains AC outlet.</li> </ul>
<b>No Sound</b>	<ul style="list-style-type: none"> <li>• Is the input LEVEL control for the channel turned up?</li> <li>• Is the SIGNAL LED illuminated? If not check if your signal level is too low or check the signal cable, mixer and other equipment setting and cabling.</li> <li>• Are you sure your signal cables works properly? check it using a cable tester or replacing with a new one.</li> <li>• Are you sure your power cable works properly? check it using a cable tester or replacing with a new one.</li> </ul>
<b>Distorted Sound</b>	<ul style="list-style-type: none"> <li>• Input signal level is too high. Turn down your level controls.</li> </ul> <p>NOTE: The loudspeakers should never be operated at a level which causes the amplifier Clip LEDs to illuminate constantly.</p>
<b>Different channel level</b>	<ul style="list-style-type: none"> <li>• Check if are using a balanced cable for one channel and an unbalanced one for the other, as this would cause a considerable difference in channel levels.</li> <li>• Be sure that your loudspeaker system is fully connected and both loudspeakers have the same impedance.</li> </ul>
<b>Noise / Hum</b>	<ul style="list-style-type: none"> <li>• Whenever possible, preferably use only balanced cables. Unbalanced lines may also be used but may result in noise over long cable runs.</li> <li>• Sometimes it helps to plug all audio equipment into the same AC circuit so they share a common ground.</li> </ul>





## CE CONFORMITY

- Proel products comply with directive EMC 2014/30/CE, as stated in EN 55103-1 and EN 55103-2 standards and with directive LVD 2014/35/CE, as stated in EN 60065 standard.
- Under the EM disturbance, the ratio of signal-noise will be changed above 10dB.

## PACKAGING, SHIPPING AND COMPLAINT

- This unit package has been submitted to ISTA 1A integrity tests. We suggest you control the unit conditions immediately after unpacking it.
- If any damage is found, immediately advise the dealer. Keep all unit packaging parts to allow inspection.
- Proel is not responsible for any damage that occurs during shipment.
- Products are sold "delivered ex warehouse" and shipment is at charge and risk of the buyer.
- Possible damages to unit should be immediately notified to forwarder. Each complaint for package tampered with should be done within eight days from product receipt.

## WARRANTY AND PRODUCTS RETURN

- Proel products have operating warranty and comply their specifications, as stated by manufacturer.
- Proel warrants all materials, workmanship and proper operation of this product for a period of two years from the original date of purchase. If any defects are found in the materials or workmanship or if the product fails to function properly during the applicable warranty period, the owner should inform about these defects the dealer or the distributor, providing receipt or invoice of date of purchase and defect detailed description. This warranty does not extend to damage resulting from improper installation, misuse, neglect or abuse. Proel S.p.A. will verify damage on returned units, and when the unit has been properly used and warranty is still valid, then the unit will be replaced or repaired. Proel S.p.A. is not responsible for any "direct damage" or "indirect damage" caused by product defectiveness.

## INSTALLATION AND DISCLAIMER

- Proel products have been expressly designed for audio application, with signals in audio range (20Hz to 20kHz). Proel has no liability for damages caused in case of lack of maintenance, modifications, improper use or improper installation non-applying safety instructions.
- The installation of these speakers is provided for indoors, in case of use outdoors be sure that the speakers are installed correctly in a safe location protected from wind, rain and humidity. To avoid performance deterioration of mechanical, acoustics and electrical parts is not advisable to leave these speakers exposed outdoors for a long period of time, so we suggest a temporary installation for the limited sound events.
- The installation of these speakers is provided for floor or by means of specific stands able to support their weight. Therefore avoid installation on unstable elements such as: furniture, chairs and vibrant surfaces as stages or other speakers without appropriate fix point specifically designed to avoid speaker movement. Then avoid the use of inadequate supports, we suggest to use PROEL stands and accessories only.
- In case of the speakers are provided of rigging points: **DO NOT SUSPEND THE SPEAKERS FROM THE HANDLES**, use exclusively these rigging points. Consult professional rigger or structural engineers prior to suspending loudspeakers from a structure not intended for that use. Always know the working load limit of the structure supporting the loudspeakers. Always make sure that the rigging hardware minimum rating is at least five times the actual load, speakers and rigging hardware.
- In case of suspended installations of active loudspeakers where is not possible to turn on and off the speakers from their appropriate switches, we recommend to install switches on the mains lines, for this purpose consult an expert electrician for the exact dimension of wiring.
- Locate the speakers as far away as possible from radio or television receivers or other sensitive equipment. These speakers have a strong magnetic field which can induce hum and noise into unshielded devices that are located nearby with consequent deterioration of reception of image and sound.
- Proel S.p.A. reserves the right to change these specifications at any time without notice.
- Proel S.p.A. declines any liability for damages to objects or persons caused by lacks of maintenance, improper use, installation not performed with safety precautions and at the state of the art.

## POWER SUPPLY AND MAINTENANCE

- Clean only with dry cloth.
- Check periodically that the slots for its proper ventilation and heating dissipation are not obstructed by dust, remove the dust using a dry brush or a compressed air gun.
- The amplified loudspeakers of Proel have been designed with CLASS I construction and must be connected always to a mains socket outlet with a protective earth connection (the third grounding prong).
- Before connecting the product to the mains outlet make certain that the mains line voltage matches that shown on the rear of the product, a tolerance of up to  $\pm 10\%$  is acceptable.
- Inside the amplified loudspeakers are present special safety devices such as:
  - ✓ Transformer and amplifier over-heating protection.
  - ✓ Protection against excessive power applied at each speaker.
- **⚠ THE REPLACEMENT OF FUSES INSIDE THE APPARATUS MUST BE MADE ONLY BY QUALIFIED PERSONNEL.**
- **⚠ CHECK THE CONDITION OF THE PROTECTION FUSE, ACCESSIBLE OUTWARD, ONLY WITH THE APPARATUS SWITCHED OFF AND DISCONNECTED FROM THE MAINS LINE OUTLET.**
- **⚠ REPLACE THE PROTECTION FUSE ONLY WITH SAME TYPE AS SHOWN ON THE PRODUCT.**
- **⚠ IF AFTER THE SUBSTITUTION, THE FUSE INTERRUPTS AGAIN THE APPARATUS WORKING, DO NOT TRY AGAIN THEN CONTACT THE PROEL SERVICE CENTRE.**



## INTRODUCTION

Thank you for having chosen a PROEL product.

With **FLASH X** PROEL introduces the third generation of a series of loudspeakers that represented a reference for compact, portable systems for years. The new FLASH XD continue a long history of high-definition sound, reliability and rugged construction in an affordable package, adding now significant steps forward in technology and a brand new style, and still offering the best-in-class performance, features and design.

**FLASH8XD** is powered by newly designed amplifier module able to provide up to 600W of clean and undistorted power. The high-efficiency Class D output stages, combined with light-weight and compact Switch Mode Power Supply, gives a massive punch and a consistent reserve of power. The built-in 2-channel mixer with independent LINE and MIC inputs can turn any FLASH8XD system into an instant PA system.

The use of a high-definition compression drivers and a long-excursion woofer carefully selected and customized provides an accurate acoustic response and an amazing sound pressure level with very low distortion.

FLASH8XD is controlled by the powerful PROEL CORE LT DSP, featuring high-performance signal processing and high-definition 24bit converters, capable to deliver an outstanding sound definition and a dynamic performance typical of top-end systems. The CORE DSP signal processing includes a sophisticated Dynamic EQ, able to shape accurately the system's sound while maintaining a full dynamic range at any level. In addition the CORE LT DSP offers an extensive dynamic protection to the system, for getting always the maximum undistorted output. 5 EQ PRESETS (MUSIC, LIVE, DJ, MONITOR, SPEECH) can be easily selected to adapt the speakers to any kind of application.

Other features of FLASH8XD are a compact and lightweight PP cabinet with extended internal ribbing and symmetrical wedge angle, a constant wide-coverage (90° x 60°) horn for a uniform and coherent sound dispersion, a newly-designed ergonomic aluminium handle and built-in flying points for the use in fixed installation.

## INSTRUCTIONS (FIG. 1 / 2 / 3)

### 1. LINE IN (combo XLR-JACK input)

This is a female combo connector, which accepts a XLR or a JACK plug from almost any type of equipment with a balanced or unbalanced outputs. The XLR input is wired as follows:

- Pin 1 = shield or ground
- Pin 2 = + positive or "hot"
- Pin 3 = - negative or "cold"

The JACK input is wired as follows:

- Tip = + positive or "hot"
- Ring = - negative or "cold"
- Sleeve = shield or ground

When connecting an unbalanced signal, wire them as follows:

- Pin2 / Tip = + positive or "hot"
- Pin 1-3 / Sleeve = shield or ground

**NOTE:** whenever possible, use always balanced cables. Unbalanced lines may also be used but may result in noise over long cable runs. In any case, avoid using a balanced cable for one channel and an unbalanced one for the other.

### 2. MIC IN (XLR input balanced)

This is a female XLR connector, which accepts a balanced microphone input from almost any type of Microphone. The XLR input is wired as follows:

- Pin 1 = shield or ground
- Pin 2 = + positive or "hot"
- Pin 3 = - negative or "cold"

### 3. MIX OUT (XLR output unbalanced)

These XLR connectors provide an unbalanced line-level signal that represent the mixed mic and line signal. Connect these to the inputs of other powered speakers to make an array.

### 4. LINE LEVEL control

Rotary level control: it attenuates the level of the signal sent to the LINE IN input, the attenuation ranges from "0" fully closed (the signal is completely attenuated) to "10" fully open, nominal level (the signal is not attenuated in any way, so is fed to the internal amplifier at the same level at which it arrives on input).



## 5. MIC GAIN control

The MIC level control adjusts the sensitivity of the mic input. The minimum gain is with the knob all way down, ramping up to maximum gain when rotated fully clockwise.

**NOTE:** *when several speakers are linked using the MIX OUT connector, if a microphone is connected to the first one its MIC LEVEL control adjusts the mic level for all the linked speakers. In this case, make sure the the LINE LEVEL control of all the linked speakers is fully open.*

## 6. SIGN/LIMIT indicator

2-color LED.

GREEN: indicates the presence of signal at the amplifier input.

RED: indicates that the amplifier's is reaching its maximum output power, so the DSP LIMITER is working. When this LED flashes RED continuously reduce the input signal level.

## 7. FRONT LED OFF button

This button disables or enables the front LED, which indicates when the system is ON.

## 8. DSP MODE button

Use this button to select one five EQ PRESETS (**MUSIC, LIVE, DJ, MONITOR, SPEECH**) available for adapting the FLASH12XD to different applications.

## 9. PRESET indicator

These GREEN LEDs show the current EQ preset loaded in the DSP.

**MUSIC:** to be used for recorded music playback. This is the default preset.

**LIVE:** to be used for reproducing at best vocals and instruments in live applications.

**DJ:** specifically designed for recorded dance and electronic music playback.

**MON:** to be used when the loudspeaker is used as a floor monitor for musicians and DJs.

**SPEECH:** to be used for spoken word applications, in particular when a dynamic microphone is connected directly to the system.

## 10. POWER switch

Speaker is "ON" when the switch is in the "I" position.

**NOTE:** *When you shut down your equipment, turn off the speaker first. When powering up, turn on the speaker last.*

## 12. FUSE holder

Here is placed the mains protection fuse.



**WARNING: REPLACE THE PROTECTION FUSE ONLY WITH SAME TYPE AS SHOWN ON THE PRODUCT.**

**IF, AFTER THE REPLACEMENT, THE FUSE BLOWS AGAIN, DO NOT TRY AGAIN TO REPLACE IT BUT CONTACT THE NEAREST PROEL SERVICE CENTER.**

## 12. AC~ socket

Here's where you plug in your speaker's mains supply cord. You should always use the mains cord supplied with the speaker. Be sure your speaker is turned off before you plug the mains supply cord into an electrical outlet.



## AVVERTENZE PER LA SICUREZZA

• **⚠ ATTENZIONE:** Durante le fasi di uso o manutenzione, devono essere prese alcune precauzioni onde evitare danneggiamenti alle strutture meccaniche ed elettroniche del prodotto.

Prima di utilizzare il prodotto, si prega di leggere attentamente le seguenti istruzioni per la sicurezza. Prendere visione del manuale d'uso e conservarlo per successive consultazioni:

- In presenza di bambini, controllare che il prodotto non rappresenti un pericolo.
- Posizionare l'apparecchio al riparo dagli agenti atmosferici e a distanza di sicurezza dall'acqua, dalla pioggia e dai luoghi ad alto grado di umidità.
- Collocare o posizionare il prodotto lontano da fonti di calore quali radiatori, griglie di riscaldamento e ogni altro dispositivo che produca calore.
- Collocare o posizionare il prodotto in modo che non ci siano ostruzioni alla sua propria ventilazione e dissipazione di calore.
- Evitare che qualsiasi oggetto o sostanza liquida entri all'interno del prodotto.
- Il prodotto deve essere connesso esclusivamente alla rete elettrica delle caratteristiche descritte nel manuale d'uso o scritte sul prodotto, usando esclusivamente il cavo rete in dotazione e controllando sempre che sia in buono stato, in particolare la spina e il punto in cui il cavo esce dal prodotto.
- **⚠ ATTENZIONE:** Se il cavo rete viene scollegato dall'apparecchio per spegnerlo, il cavo rete rimarrà operativo in quanto la sua spina è ancora collegata alla rete elettrica.
- Non annullare la sicurezza garantita dall'uso di spine polarizzate o con messa a terra.
- Fare attenzione che il punto di alimentazione della rete elettrica sia dotato di una efficiente presa di terra.
- Disconnettere il prodotto dalla rete elettrica durante forti temporali o se non viene usato per un lungo periodo di tempo.
- Non disporre oggetti sul cavo di alimentazione, non disporre i cavi di alimentazione e segnale in modo che qualcuno possa inciamparci. Altresì non disporre l'apparecchio sui cavi di altri apparati. Installazioni inappropriate di questo tipo possono creare la possibilità di rischio di incendio e/o danni alle persone.

– Questo prodotto può essere capace di produrre livelli sonori che possono causare perdite d'udito permanenti. Si raccomanda di evitare l'esposizione ad alti livelli sonori o livelli non confortevoli per lunghi periodi di tempo. Se si notano perdite d'udito o acufeni (fischi) consultare un audiologo. La sensibilità alla perdita di udito causata da eccessiva esposizione al rumore varia considerevolmente da individuo a individuo, ma mediamente ciascuno può accusare perdita di udito se esposto al rumore per un certo periodo di tempo. Come suggerimento viene riportata la tabella dei tempi massimi di esposizione giornaliera al rumore al fine di evitare perdite di udito, fonte della tabella è l'ente per la salute degli Stati Uniti (OSHA).

Si fa presente inoltre che sia i bambini che gli animali domestici sono più sensibili al rumore intenso.

Ore di esposizione giornaliera	Livello sonoro in dBA costante di tempo SLOW	Esempio Tipico
8	90	Duo acustico in un piccolo club
6	92	
4	95	Treno metropolitano
3	97	
2	100	Musica classica molto forte
1.5	102	
1	105	Rumore da traffico urbano intenso
0.5	110	
0.25 or less	115	Parte più rumorosa di un concerto rock

## IN CASO DI GUASTO

- In caso di guasto o manutenzione questo prodotto deve essere ispezionato da personale qualificato quando:
  - Ci sono difetti sulle connessioni o sui cavi di collegamento in dotazione.
  - Sostanze liquide sono penetrate all'interno del prodotto.
  - Il prodotto è caduto e si è danneggiato.
  - Il prodotto non funziona normalmente esibendo un marcato cambio di prestazioni.
  - Il prodotto perde sostanze liquide o gassose o ha l'involucro danneggiato.
- Non intervenire sul prodotto. Rivolgersi a un centro di assistenza autorizzato Proel.

## PROBLEMATICHE COMUNI

<b>Assenza di alimentazione</b>	<ul style="list-style-type: none"> <li>• L'interruttore dell'altoparlante è spento.</li> <li>• Accertarsi che ci sia effettivamente tensione sulla presa di corrente (controllare con un tester o una lampada).</li> <li>• Accertarsi che la spina di rete sia saldamente inserita nella presa.</li> </ul>
<b>Nessun Suono</b>	<ul style="list-style-type: none"> <li>• È il controllo di livello LINE IN girato al massimo?</li> <li>• È acceso il LED di segnale? Se no, controllate se il livello di segnale sia troppo basso o controllate il cavo di segnale, le impostazioni e i cablaggi di mixer o altri apparecchi collegati.</li> <li>• Sei sicuro che il cavo di segnale sia in buono stato? controlla il cavo con un tester oppure sostituiscilo con un altro.</li> </ul>
<b>Suono Distorto</b>	<ul style="list-style-type: none"> <li>• Il livello del segnale di ingresso è troppo alto, abbassare i controlli del livello.</li> </ul> <p>NOTA: L'altoparlante non deve mai lavorare con livelli che fanno illuminare in modo pressoché costante il LED rosso dell'amplificatore.</p>
<b>Livello differente sui canali</b>	<ul style="list-style-type: none"> <li>• Controllare se si stanno usando cavi bilanciati su un canale e sbilanciati sull'altro, ciò può comportare una notevole differenza di livello sui canali.</li> </ul>
<b>Rumore / Ronzio</b>	<ul style="list-style-type: none"> <li>• Qualora possibile, usare preferibilmente solo cavi bilanciati. Cavi sbilanciati possono essere usati ma risultano rumorosi su lunghe distanze.</li> <li>• Talvolta può essere di aiuto alimentare tutto l'equipaggiamento audio collegandolo dalla stessa linea di corrente AC, in modo che tutti gli apparati condividano la stessa presa di terra.</li> </ul>



## CONFORMITÀ CE

- I Prodotti Proel sono conformi alla direttiva EMC 2014/30/CE, secondo gli standard EN 55103-1 ed EN 55103-2 ed alla direttiva LVD 2014/35/CE, secondo lo standard EN 60065.
- Se sottoposto a disturbi EM, il rapporto segnale-rumore può essere superiore a 10dB.

## IMBALLAGGIO, TRASPORTO E RECLAMI

- L'imballo è stato sottoposto a test di integrità secondo la procedura ISTA 1A. Si raccomanda di controllare il prodotto subito dopo l'apertura dell'imballo.
- Se vengono riscontrati danni informare immediatamente il rivenditore. Conservare quindi l'imballo completo per permetterne l'ispezione.
- Proel declina ogni responsabilità per danni causati dal trasporto.
- Le merci sono vendute "franco nostra sede" e viaggiano sempre a rischio e pericolo del distributore.
- Eventuali avarie e danni dovranno essere contestati al vettore. Ogni reclamo per imballi manomessi dovrà essere inoltrato entro 8 giorni dal ricevimento.

## GARANZIE E RESI

- I Prodotti Proel sono provvisti della garanzia di funzionamento e di conformità alle proprie specifiche, come dichiarate dal costruttore.
- La garanzia di funzionamento è di 24 mesi dopo la data di acquisto. I difetti rilevati entro il periodo di garanzia sui prodotti venduti, attribuibili a materiali difettosi o difetti di costruzione, devono essere tempestivamente segnalati al proprio rivenditore o distributore, allegando evidenza scritta della data di acquisto e descrizione del tipo di difetto riscontrato. Sono esclusi dalla garanzia difetti causati da uso improprio o manomissione. Proel SpA constata tramite verifica sui resi la difettosità dichiarata, correlata all'appropriato utilizzo, e l'effettiva validità della garanzia; provvede quindi alla sostituzione o riparazione dei prodotti, declinando tuttavia ogni obbligo di risarcimento per danni diretti o indiretti eventualmente derivanti dalla difettosità.

## INSTALLAZIONE E LIMITAZIONI D'USO

- I Prodotti Proel sono destinati esclusivamente ad un utilizzo specifico di tipo sonoro: segnali di ingresso di tipo audio (20Hz-20kHz). Proel declina ogni responsabilità per danni a terzi causati da mancata manutenzione, manomissioni, uso improprio o installazione non eseguita secondo le norme di sicurezza.
- L'installazione di questi altoparlanti è prevista per uso interno, in caso di utilizzo all'esterno assicurarsi che gli altoparlanti siano installati correttamente in un luogo sicuro e protetto dal vento, pioggia e umidità. Al fine di non deteriorarne le prestazioni meccaniche, acustiche ed elettriche non è consigliato lasciare questi altoparlanti esposti all'aperto per lunghi periodi di tempo, si consiglia pertanto una installazione temporanea all'evento da sonorizzare.
- L'installazione di questi altoparlanti è prevista a pavimento o tramite specifici supporti adeguati al peso da sostenere. Pertanto evitare l'installazione su elementi instabili quali: mobili, sedie e superfici vibranti quali palchi e altri altoparlanti non dotati di fissaggi atti a evitare spostamenti dell'altoparlante. Quindi evitare di utilizzare supporti non adeguati, si consiglia di usare solo i supporti suggeriti da PROEL.
- Qualora gli altoparlanti siano muniti di punti di fissaggio per la sospensione: **NON SOSPENDERE GLI ALTOPARLANTI DALLE MANIGLIE** usare esclusivamente questi punti di fissaggio. Consultare attrezzisti professionisti o ingegneri strutturali prima di sospendere altoparlanti da strutture non intese per questo specifico scopo. Non superare il limite di carico della struttura che sosterrà gli altoparlanti. Assicurarsi che tutte le meccaniche di sostegno siano in grado di sopportare un peso almeno 5 volte superiore al carico degli altoparlanti incluse le meccaniche di sospensione.
- Nel caso di installazioni sospese di altoparlanti attivi in cui non sia possibile l'uso dei singoli interruttori degli altoparlanti per l'accensione e lo spegnimento dei medesimi, si raccomanda l'installazione di interruttori sulle linee di alimentazione della rete elettrica, a tale proposito consultare un esperto elettricista per il corretto dimensionamento dell'impianto elettrico.
- Installare questi altoparlanti il più lontano possibile da radiorecettori e televisori. Un altoparlante installato in prossimità di questi apparati può causare interferenza e rumore con conseguente degrado della ricezione di immagini e suoni.
- La Proel S.p.a. si riserva di modificare il prodotto e le sue specifiche senza preavviso.
- Proel declina ogni responsabilità per danni a terzi causati da mancata manutenzione, manomissioni, uso improprio o installazione non eseguita secondo le norme di sicurezza e a regola d'arte.

## ALIMENTAZIONE E MANUTENZIONE

- Pulire il prodotto unicamente con un panno asciutto.
- Controllare periodicamente che le aperture di raffreddamento non siano ostruite da accumuli di polvere, provvedere alla rimozione della polvere mediante un pennello o aria compressa.
- Gli altoparlanti amplificati della Proel sono costruiti in CLASSE I e prevedono sempre il collegamento mediante presa di corrente con terminale di terra di protezione (terzo terminale di terra).
- Prima di collegare l'apparecchio alla presa di corrente, accertatevi che la tensione di rete corrisponda a quella indicata sul retro dell'apparato, è consentito un margine del  $\pm 10\%$  rispetto al valore nominale.
- Negli altoparlanti amplificati sono presenti anche i seguenti dispositivi di sicurezza:
  - ✓ protezioni termiche del trasformatore e dell'amplificatore.
  - ✓ protezioni alla potenza erogata in eccesso ai singoli altoparlanti.
- **⚠ LA SOSTITUZIONE DI FUSIBILI ALL'INTERNO DELL'APPARATO È CONSENTITO SOLAMENTE A PERSONALE QUALIFICATO.**
- **⚠ CONTROLLARE LO STATO DEI FUSIBILI DI PROTEZIONE ESCLUSIVAMENTE AD APPARATO SPENTO E DISCONNESSO DALLA RETE ELETTRICA.**
- **⚠ RIMPIAZZARE IL FUSIBILE DI PROTEZIONE ESCLUSIVAMENTE CON UN FUSIBILE CON LE MEDESIME CARATTERISTICHE RIPORTATE SUL PRODOTTO.**
- **⚠ SE DOPO LA SOSTITUZIONE, IL FUSIBILE INTERROMPE NUOVAMENTE IL FUNZIONAMENTO DELL'APPARATO, NON INSISTERE E CONTATTARE IL SERVIZIO ASSISTENZA PROEL.**





## INTRODUZIONE

Grazie per aver scelto un prodotto PROEL.

Con **FLASH XD** PROEL introduce la terza generazione di una serie di diffusori che da anni rappresenta un riferimento per i sistemi di diffusione compatti e portatili. I nuovi diffusori FLASH XD proseguono una lunga storia di suoni ad alta definizione, affidabilità e robustezza in un formato conveniente, aggiungendo importanti miglioramenti nella tecnologia ed uno stile completamente nuovo, ed offrendo di nuovo il massimo in prestazioni, funzionalità e design.

**FLASH8XD** è alimentata da un amplificatore di nuova concezione in grado di fornire fino a 6000W di potenza pulita e non distorta. Gli stadi di uscita in classe D ad alta efficienza, combinati con un alimentatore SMPS leggero e compatto, forniscono una notevole 'spinta' ed una riserva di potenza costante. Il mixer a 2 canali integrato con ingressi LINE e MIC indipendenti può trasformare istantaneamente qualsiasi FLASH8XD in un sistema PA.

L'uso di un driver a compressione ad alta definizione ed un woofer a lunga escursione accuratamente selezionati e personalizzati fornisce una risposta acustica accurata ed un incredibile livello di pressione sonora con distorsioni molto basse.

FLASH8XD è controllata dal potente PROEL CORE LT DSP, con un'elaborazione del segnale ad elevate prestazioni e con convertitori a 24 bit ad alta definizione, in grado di offrire una definizione sonora eccezionale e una performance dinamica tipica dei sistemi top-end. L'elaborazione del segnale CORE DSP include un sofisticato EQ dinamico, in grado di processare con precisione il suono del sistema mantenendo una gamma dinamica completa a qualsiasi livello. Inoltre, il sistema CORE LT DSP offre un'ampia protezione dinamica al sistema per ottenere sempre la massima potenza in uscita. 5 EQ PRESETS (MUSIC, LIVE, DJ, MONITOR, SPEECH) possono essere facilmente selezionati per adattare gli altoparlanti a qualsiasi tipo di applicazione.

Tra le caratteristiche di FLASH8XD abbiamo anche il cabinet in PP leggero e compatto con esteso sistema di nervature interne e profilo trapezoidale, la tromba per le frequenze alte ad ampio angolo di copertura costante (90°x60°) per una diffusione uniforme del suono, la maniglia in alluminio ergonomica di nuova concezione ed i punti di sospensione per l'installazione fissa.

## ISTRUZIONI (FIG. 1 / 2 / 3)

### 1. LINE IN (ingresso COMBO XLR/JACK)

Questo è un connettore combinato XLR/JACK femmina che preleva il segnale da praticamente qualsiasi apparecchio bilanciato o sbilanciato. Le terminazioni dell' ingresso XLR sono:

- Pin 1 = schermo o massa
- Pin 2 = + positivo o "caldo"
- Pin 3 = - negativo o "freddo"

Le terminazioni dell' ingresso JACK sono:

- Tip (punta) = + positivo o "caldo"
- Ring (anello) = - negativo o "freddo"
- Sleeve (manicotto) = schermo o massa

E quando si collega un segnale sbilanciato, sono le seguenti:

- Pin2 / Tip (punta) = + positivo o "caldo"
- Pin 1-3 / Sleeve (manicotto) = schermo o massa

**NOTA:** Se possibile, usare sempre cavi bilanciati. Cavi sbilanciati possono essere usati ma potrebbero dare problemi di rumore se molto lunghi. In ogni caso, evitate di usare un cavo bilanciato per un canale e uno sbilanciato per l'altro.

### 2. MIC IN (ingresso XLR microfono bilanciato)

È un connettore femmina XLR, in grado di accettare un segnale microfonico bilanciato da ogni tipo di microfono. L'ingresso XLR ha i seguenti terminali:

- Pin 1 = schermo o massa
- Pin 2 = + positivo o "caldo"
- Pin 3 = - negativo o "freddo"

### 3. MIX OUT (XLR di uscita sbilanciato)

Questi connettori XLR forniscono un segnale di linea sbilanciato che rappresenta il mix degli ingressi mic e line. Collegate queste uscite agli ingressi di altri altoparlanti amplificati per costituire un array.



#### 4. LINE LEVEL (controllo di livello ingresso linea)

Controllo di livello rotativo: attenua il livello del segnale inviato all'amplificatore interno, l'attenuazione varia tra completamente chiuso "0" a completamente aperto "10" o livello nominale (il segnale non è attenuato in nessun modo, viene inviato all'amplificatore interno allo stesso livello con cui arriva all'ingresso).

#### 5. MIC LEVEL (controllo di livello microfono)

Il controllo MIC LEVEL regola la sensibilità dell'ingresso MIC. Si ha il guadagno minimo con la manopola completamente chiusa e il guadagno massimo se girata completamente in senso orario.

**NOTA:** quando più diffusori sono collegati insieme utilizzando il connettore MIX OUT, nel caso un microfono sia collegato al primo diffusore il suo controllo MIC LEVEL regola il livello del microfono per tutti i diffusori collegati. In questo caso fate attenzione che il controllo LINE LEVEL di tutti i diffusori collegati sia al massimo.

#### 6. SIGN/LIMIT (indicatore di segnale e clip limiter)

LED a 2 colori.

VERDE: indica la presenza di segnale in ingresso nell'amplificatore.

ROSSO: indica che l'amplificatore sta raggiungendo il livello massimo di potenza di uscita e che, di conseguenza, il LIMITER del DSP sta intervenendo. Quando questo LED lampeggia in modo continuo ridurre il segnale di ingresso.

#### 7. FRONT LED OFF (tasto)

Questo tasto disabilita o abilita il LED frontale, il quale indica lo stato di accensione del diffusore.

#### 8. DSP MODE (tasto)

Utilizzate questo tasto per selezionare uno dei 5 EQ PRESETS (**MUSIC, LIVE, DJ, MONITOR, SPEECH**) disponibili per adattare il diffusore a diversi tipi di applicazione.

#### 9. PRESET (indicatore preset)

Questi LED verdi indicano il preset di EQ corrente caricato nel DSP.

**MUSIC:** da utilizzare per la riproduzione di musica registrata. Questo è il preset iniziale.

**LIVE:** da utilizzare per riprodurre voci e strumenti in applicazioni live.

**DJ:** specificatamente realizzato per la riproduzione di musica dance ed elettronica.

**MONITOR:** da selezionare quando l'altoparlante è utilizzato come monitor da palco per musicisti o DJ.

**SPEECH:** da utilizzare per il parlato, in particolare in quelle situazioni in cui si collega un microfono dinamico direttamente all'ingresso MIC.

#### 10. POWER (interruttore di accensione)

L'altoparlante è acceso "ON" quando l'interruttore è nella posizione "I".

**NOTA:** Quando si spegne l'impianto sonoro, spegnere per primi gli altoparlanti. Quando si accende l'impianto sonoro, accendere gli altoparlanti per ultimi.

#### 12. FUSE (portafusibili)

In questo vano è inserito il fusibile di protezione principale di rete.



**ATTENZIONE: RIMPIAZZARE IL FUSIBILE DI PROTEZIONE ESCLUSIVAMENTE CON UN FUSIBILE CON LE MEDESIME CARATTERISTICHE RIPORTATE SUL PRODOTTO.**

**SE DOPO LA SOSTITUZIONE, IL FUSIBILE INTERROMPE NUOVAMENTE IL FUNZIONAMENTO DELL'APPARATO, NON INSISTERE E CONTATTARE IL SERVIZIO ASSISTENZA PROEL.**

#### 12. AC~ (presa di alimentazione di rete)

In questa presa va inserito il cavo di alimentazione di rete dell'altoparlante. Si raccomanda di utilizzare esclusivamente il cavo di alimentazione in dotazione all'altoparlante. Accertatevi che l'altoparlante sia spento prima di inserire il cavo di alimentazione nella presa di corrente.





**PROEL S.p.A.**  
(World Headquarter)  
Via alla Ruenia 37/43  
64027 Sant'Omero (TE) - ITALY  
Tel: +39 0861 81241  
Fax: +39 0861 887862  
[www.proel.com](http://www.proel.com)

REV. 16/17 CODE 96MAN0122